


Instructions for fitting foot stirrup to Karma II (new model)

1) On the left side of the harness, you remove the small part with the orange webbing buckle, and you attach it into the square buckle on the harness. This small part is used with the Kuik II core, as it's the same foot-stirrup.

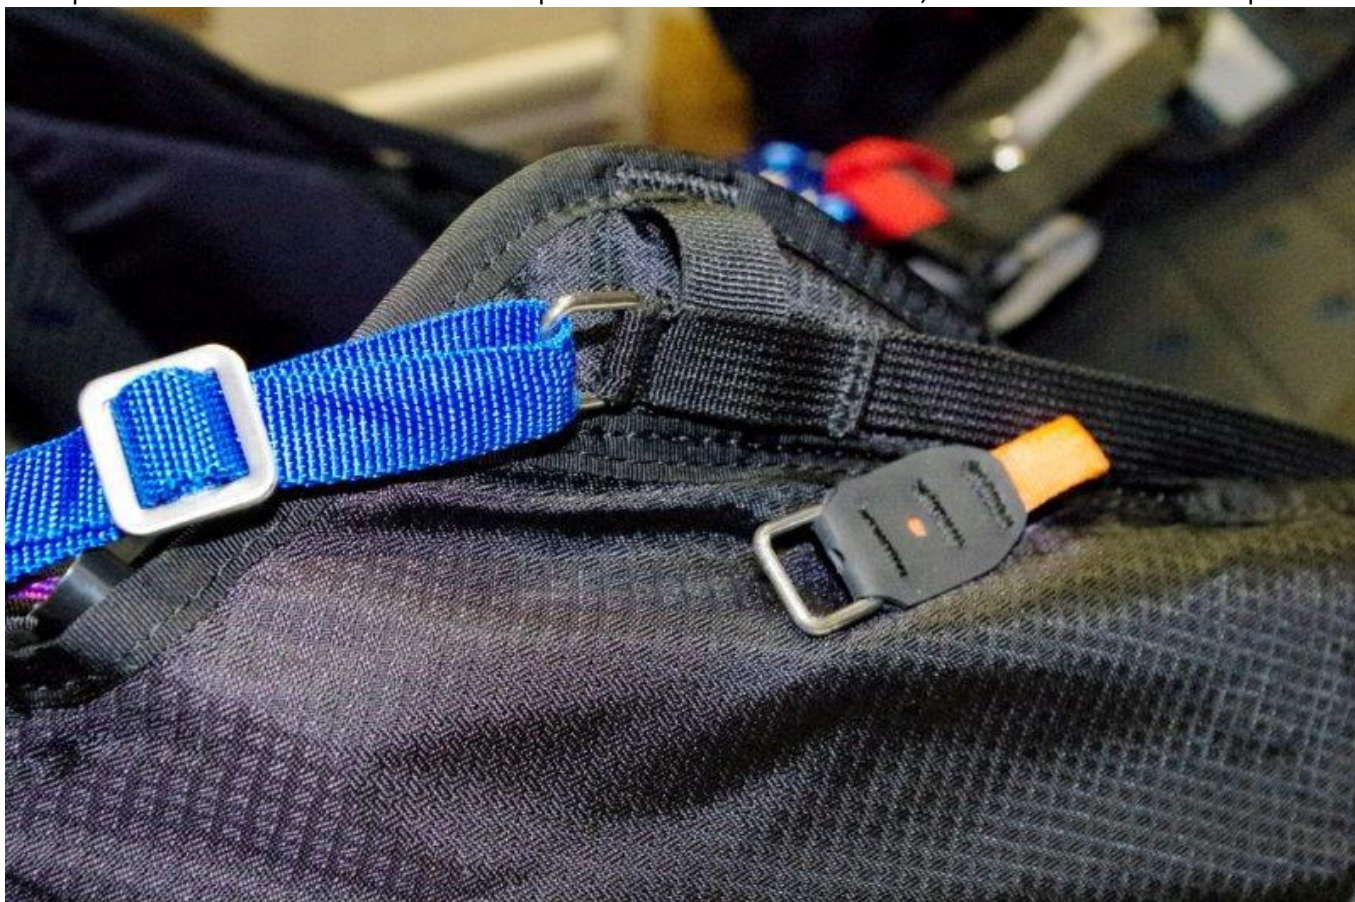

2) On the right side of the harness, you just have to position the quick-release system.



3) Attach the elastic on the speed-bar, and everything is OK!